

Insulated Water Bottle Carrier



Keep your drink cool with this stylish insulated water bottle carrier. The unique hands-free design is ideal for walking and hiking. Personalize yours with your favorite embroidery design!

Read below for these free project instructions.

Supplies Needed:

**1/4 yard lightweight canvas

**1/4 yard Insul-Bright
(thermal lining)

**1/4 yard rip-stop nylon
(for lining)

**Cutaway stabilizer

**Temporary spray adhesive

**Air-erase pen or other marking
tool

**4 inch diameter plastic lid

**60 inch length of 1 inch wide



nylon or cotton strap

**24 inch length of nylon cord

**One strap adjuster

**One cord stop

**Safety pin

**Masking tape

Designs used:

[Hiking Crest \(Small\)](#)

These designs are available in the following design packs:

[A Outdoor Adventures Design Pack - Lg](#)

[A Outdoor Adventures Design Pack - Sm](#)


First we will prepare the fabric for the outer shell. Draw a 13 inch wide by 7 inch high rectangle on the canvas. Leave a couple of inches of excess fabric around the shape. Then, using an air-erase pen or other marking tool, measure and mark the center of each side of the shape by measuring and dividing by two. Draw lines to connect the marks - these lines will be used for hooping.

Create a paper template of the design by printing it at full size using embroidery software. If you don't have embroidery software, you can cut a piece of paper the shape and



dimensions of the designs to help with placement and centering.

Poke a hole in the center of the template and align it with the center point on the fabric. Make sure the design fits well within the shape. There should be about 1 1/2 inches of space between the top and bottom edges of the design and the edges of the shape. Also, there should be about 3 1/2 inches of space between the side edges of the design and the edges of the shape.

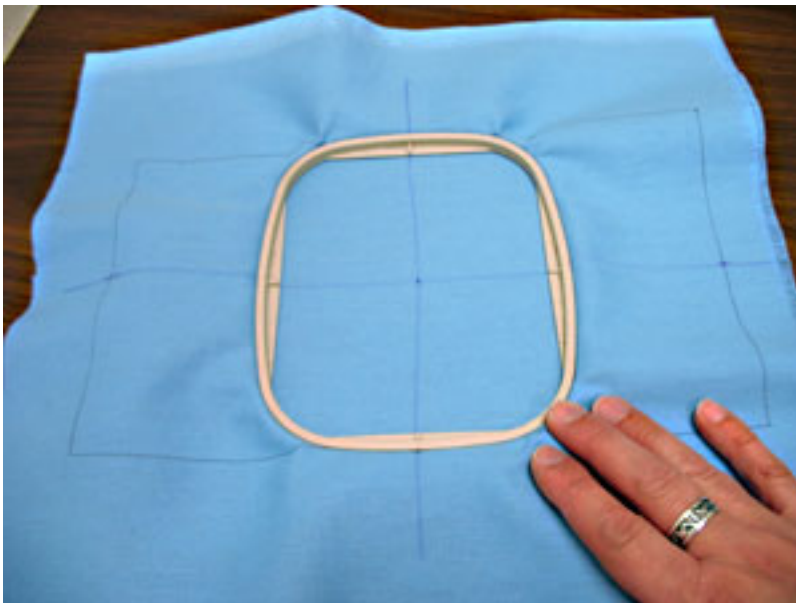

Spray a piece of cutaway stabilizer with temporary adhesive and smooth the fabric on top. Hoop the fabric and stabilizer together by aligning the marks on the hoop with the lines on the fabric. Attach the hoop to the machine and load the design. Move the hoop so that the needle is directly over the center point on the fabric. Embroider the design.

