


Hot Iron Travel Case

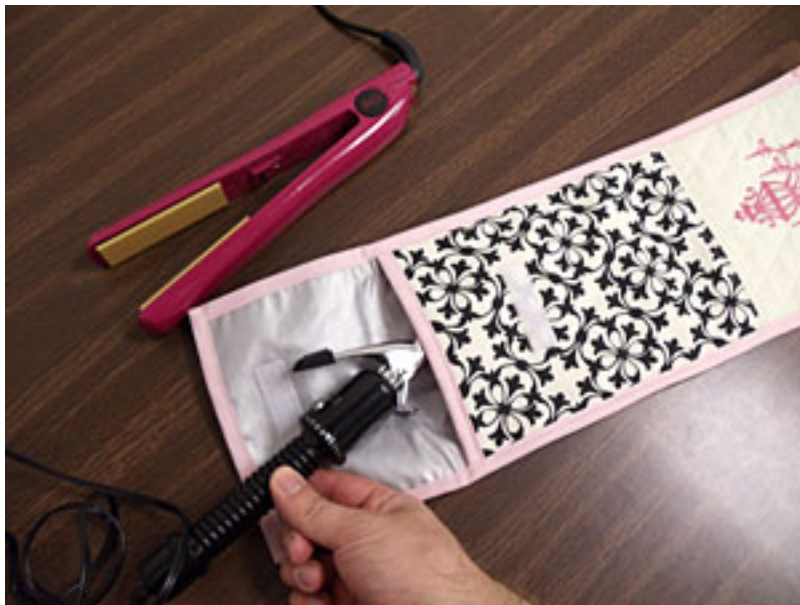

Travel in style with this convenient hot iron travel case! Use it to safely store both curling irons and flat irons.

Read below for these free project instructions!

Supplies Needed:

**1/4 yard quilted cotton fabric (filled with 100% cotton batting)

**1/4 yard print lightweight canvas

**1/4 yard ironing board fabric (we found ours at Jo-Ann Fabrics)

**Cotton batting

**Medium weight cutaway stabilizer

**Temporary spray adhesive

**Air-erase pen or dress maker's pencil

**Extra wide - double fold bias tape



**14 inch piece of 1 inch wide strapping

**3 inch piece of sew-on Velcro

Designs used:

[Light Up My Life Chandelier - small](#)


These designs are also available in the following design packs:

[A Fashion Favorites Design Pack - Sm](#)

Finished Size:


6 3/4 inches wide by 15 inches high

First, we will prepare the bottom of the front panel for the embroidery. Using an air-erase pen or other marking tool, draw a 6 1/2 inch wide by 6 inch high rectangle on the quilted cotton fabric. Mark the center of each side of the shape by measuring each side and dividing by two. Draw lines connecting the marks. Where the marks meet is the exact center of the shape. Create a paper template of the design by printing it at full size using embroidery software. If you don't have embroidery software, you can cut a piece of paper the shape and dimensions of the design to help with placement and centering.

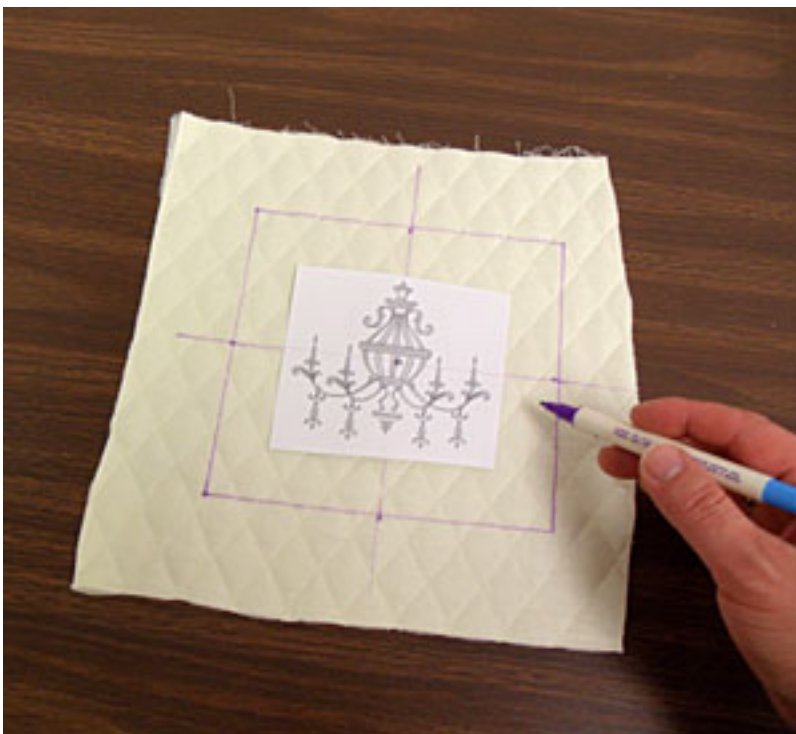

Poke a hole in the center of the template and align it with the center point on the fabric. Make sure the design fits well within

the shape - there should be at least one inch of space between the edges of the design and the edges of the shape.

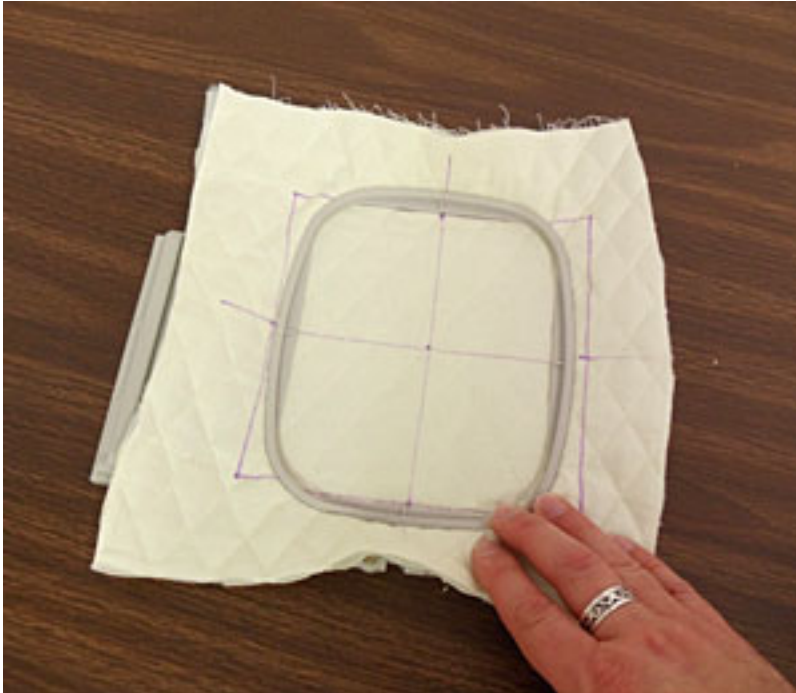

Remove the template and spray a piece of cutaway stabilizer with temporary adhesive. Smooth the fabric on top of the stabilizer. Hoop the fabric and stabilizer together by aligning the marks on the hoop with the lines on the fabric. Attach the hoop to the machine and load the design. Move the hoop so that the needle is directly over the center point on the fabric. Embroider the design - for more information on embroidering on quilted cotton [click here](#).



When the design has finished, trim away the excess stabilizer on the backside of the embroidery.
